

ACO DriveDrain® is a practical, lightweight drainage system for use in light duty areas around the home and garden.

DriveDrain® is easy to install and is available with end caps and bottom outlets to provide easy water runoff.

DriveDrain® is strong enough to withstand slow moving vehicles and is ideal for around patios, swimming pools, barbecue areas, tennis courts and in front of garage doors.


### Features

- 1m long plastic channel with choice of push-fit grates
- Able to support a 5 tonne vehicle
- Compatible with standard 90mm diameter stormwater pipe connection





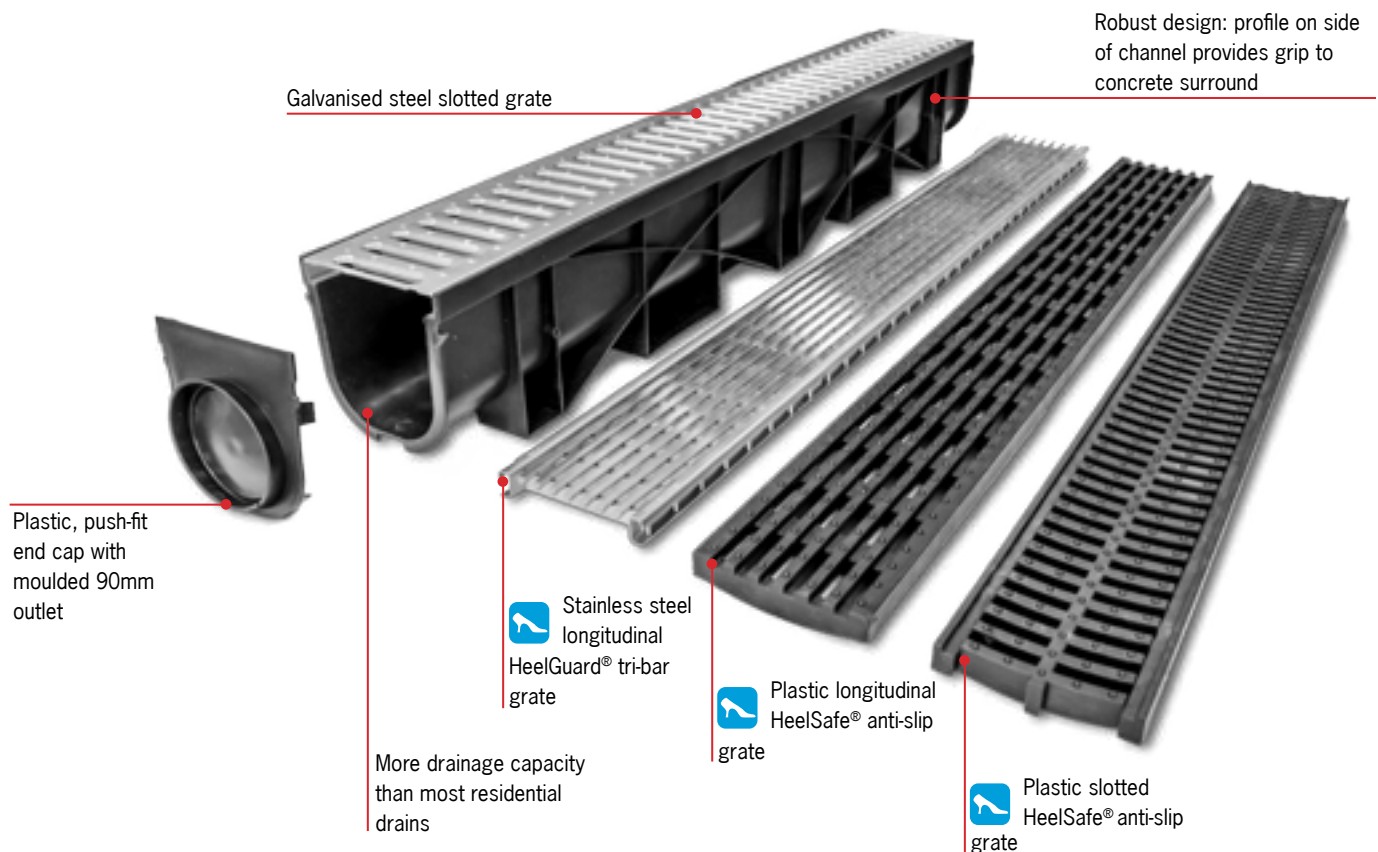

## DriveDrain



### Product Overview



**Product Table**

Design	Length mm	Part No	Weight kg
 DriveDrain® black plastic channel	1000	<b>82892</b>	2.4
 DriveDrain® black plastic HeelSafe® longitudinal grate	1000	<b>82894</b>	0.5
 DriveDrain® black plastic HeelSafe® slotted grate	1000	<b>82895</b>	0.5
 DriveDrain® galvanised steel slotted grate	1000	<b>82893</b>	2.7
 DriveDrain® stainless steel HeelGuard® longitudinal grate	1000	<b>296000</b>	3.2
 DriveDrain® inlet/outlet endcap	-	<b>82890</b>	0.5

HeelGuard® - slots 10mm or less to prevent stiletto style heels becoming trapped. HeelSafe® - offer anti-slip properties in addition to slots 10mm or less.

**Installation Instructions**

**1 EXCAVATE**



Excavate trench and fix a line to determine the alignment and finished height of proposed channel run.

**2 LAY A FIRM BASE**



If drain is to be trafficked by vehicles, lay a bed of good quality concrete. Otherwise, use compacted fill along base of the trench.

**3 CUT THE OUTLET**



Cut out preformed outlet located in base of the channel to allow connection to drain pipe.

**4 ASSEMBLE THE COMPONENTS**



Connect channels together and fit end caps.

**5 PREPARE FOR BACKFILLING**



Mask along the grates over entire run length. Lower channel assembly, seal to drain pipe and pack to correct level.

**6 COMPLETE THE INSTALLATION**



Surround channel run with backfill or concrete. Ensure that it is finished 2-3mm above grate. Remove all grates. Remove masking tape and any debris from channels. Ensure outlets are clear. Replace grates.

These illustrations are for guidance only, professional guidance should be sought.

**ACO Self Point Drains & polymer concrete line drains also available**



**ACO Limited**

Unit 1/6 Percival Gull Place  
Mangere, Auckland 2022  
New Zealand

Tel: 0800 448 080  
Tel: +64 (0)9 815 9500  
Fax: +64 (0)9 255 5114

**Electronic Contact**  
info@aconz.co.nz  
www.acoself.co.nz

© June 2016 ACO Limited.

All reasonable care has been taken in compiling the information in this document. All recommendations and suggestions on the use of ACO products are made without guarantee since the conditions of use are beyond the control of the Company. It is the customer's responsibility to ensure that each product is fit for its intended purpose and that the actual conditions of use are suitable. ACO Limited reserves the right to change products and specifications without notice.

